






6. Wiring Diagram

6-1 Overall Wiring


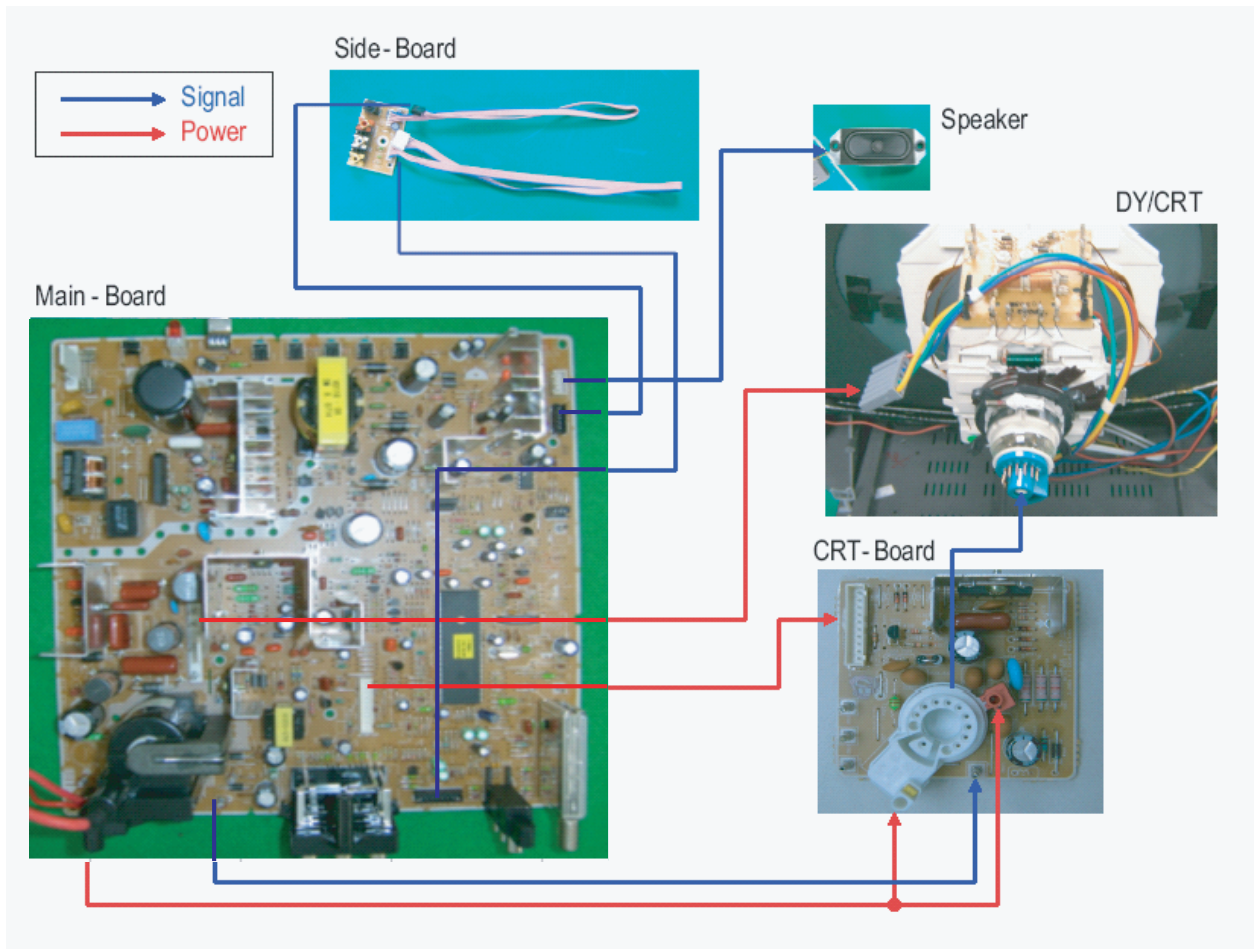


Wiring Diagram

※ The code number of cable(Lead-connector) can be changed, see “5. Exploded View & Part List.”

Use	① CRT Board↔Main Board	② Power Code	③ Speaker Wire
Code	BP39-00173B	AA96-20107C	AA96-04766A
Photo			
Use	④ CRT Board↔Main Board		
Code	AA39-20010D		
Photo			

6-2 Pin Connection

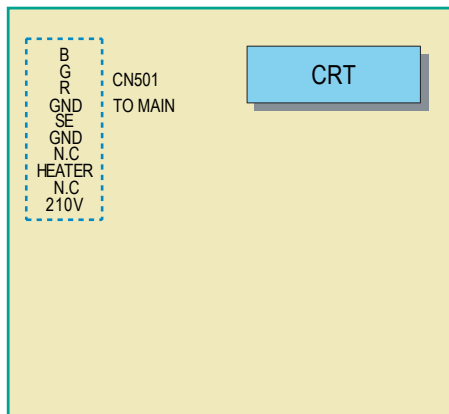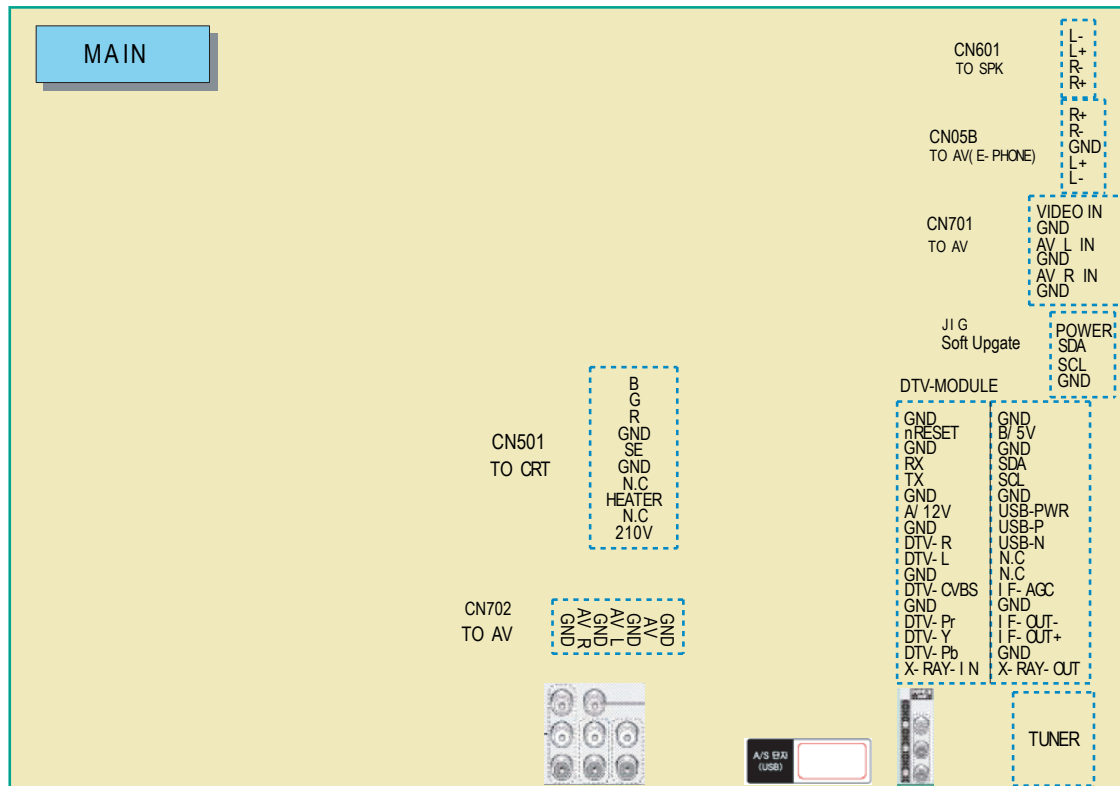

6-2-1 Main Board Connector Pin

CN501

CRT Board connection

Pin No.	Pin Name
1	B
2	G
3	R
4	GND
5	SENCE
6	GND
7	SYN
8	HEATER
9	GND
10	200V

CN05B

Side-AV connection

Pin No.	Pin Name
1	L+
2	L+
3	GND
4	R+
5	R-

CN701

Side-AV connection

Pin No.	Pin Name
1	AV2 Video In
2	GND
3	AV2 L In
4	GND
5	AV2 R In
6	GND

CN601

Speaker connection

Pin No.	Pin Name
1	L+
2	L+
3	R+
4	R-

CN501

CRT Board connection

Pin No.	Pin Name
1	GND
2	AV R IN
3	GND
4	AV L IN
5	GND
6	VIDEO IN
7	GND

CN501

Pin No.	Pin Name
1	B
2	G
3	R
4	GND
5	SENCE
6	GND
7	SYN
8	HEATER
9	GND
10	200V

6-2-2 Connector role

Loc. No.	Description
CN501	Main Board and CRT Board connect
CN05B	Main Board and Side-AV to E-Phone connect
CN701	Main Board and Side-AV connect
CN601	Main Board and Speaker connect
CN702	Main Board and Side-AV connect

MEMO